

## Attention

The on-board unit (OBU) is required for collection of the electronic toll in the Republic of Belarus.

The on-board unit is not transferable to any other vehicle!



## Scope of Supply

Check that all items listed in the following scope of supply have been received and are not damaged:

- on-board unit
- bracket
- user manual
- cleaning tissue

## Technical Data (BASIC)

Operating temperature: -25 °C to 85 °C.

Operating air humidity: Maximum 90% (at 40 °C).


The on-board unit is maintenance-free!

All rights reserved © Kapsch TrafficCom AG.

1

Unpack the on-board unit, the bracket and the cleaning tissue.

2

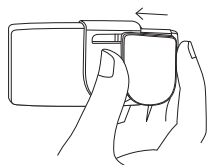


Attach the bracket to the on-board unit by sliding it into the slot.

3




Position the on-board unit straight and with the bracket side towards the windscreen.

4

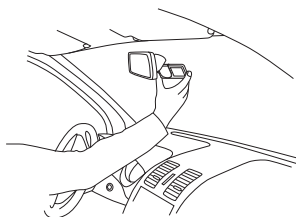


Place the on-board unit at a position at the top of the windscreen, without removing the adhesive backing. Make sure that it will fit and will not obstruct the driver's view. In case of a metallized windscreen (e.g. solar reflect screen) there is an extra non metallized area behind or above the rear view mirror (ask your car dealer)

5

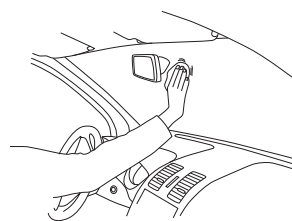


Clean the windscreen where the bracket will be placed with the cleaning tissue. Make sure that the windscreen is dry and has a temperature of at least 15°C. If necessary dry it with a cloth or dry and heat the windscreen with the defroster airflow.

6

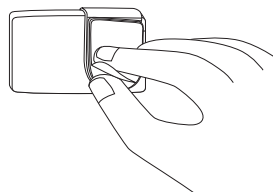

Peel off the adhesive backing from the bracket.

7

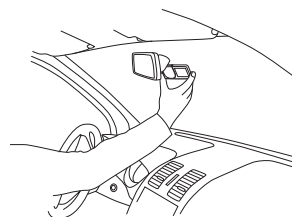

Make sure the on-board unit is straight. Carefully position it on the cleaned area on the windscreen and hold it firmly for at least 10 seconds. Leave the on-board unit in the bracket for at least 24 hours.

## Use

Operating OBU on tolled roads: When passing a tolling station, the following acoustic signals will sound:

- |                |   |
|----------------|---|
| <b>1x beep</b> | Toll transaction OK   |
| <b>2x beep</b> | Toll transaction OK, but battery is low or OBU account balance is nearly expired or low. In case of nearly expired or low OBU account balance (only applicable for prepaid accounts) re-charge the account. Go to a distribution point. |
| <b>4x beep</b> | Toll transaction is NOT OK. Go to a distribution point.   |
| <b>No beep</b> | Toll transaction is NOT OK. Go to a distribution point.   |

## General Information

The on-board unit is used to collect the distance-related toll of toll liable vehicles in the Republic of Belarus.

The rules for distance-related tolling are the valid laws and regulations in the Republic of Belarus.

The on-board unit uses the frequency bands ERC/REC 70-03, annex 5, band a and b for tolling.

The on-board unit is not property of the driver of the vehicle but is entrusted to him/her exclusively for the use of the Electronic Toll Collection System in the Republic of Belarus. At the end of its period of use, the on-board unit must be returned to a distribution point.

The on-board unit must not be opened. Any unauthorized manipulation of the unit is prohibited (e.g. reverse engineering procedures).

The on-board unit complies with the regulations R&TTE1999.

More information available at [www.beltoll.by](http://www.beltoll.by)